


I-BANNER Instructions

	Hardware	Graphic	Live Area
I-Banner 620	25" Wide	24" w x 80" or 60.5"	24" x 78.5" or 59"
I-Banner 700	28" Wide	27" w x 80" or 60.5"	27" x 78.5" or 59"
I-Banner 920	36.25" Wide	35.25" w x 80" or 60.5"	35.25" x 78.5" or 59"

COMPONENT

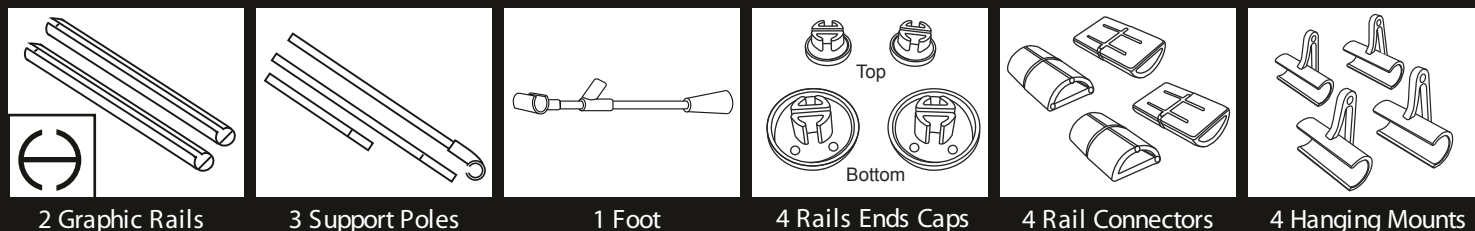


Please check to see all the components are included before


1

MOUNT GRAPHIC TO RAILS

Remove the cap from one side of both the top and bottom horizontal graphic rails to reveal a solid nylon strip. Stick the nylon leader strip to the backside of the banner using a double sided tape. (Not included)

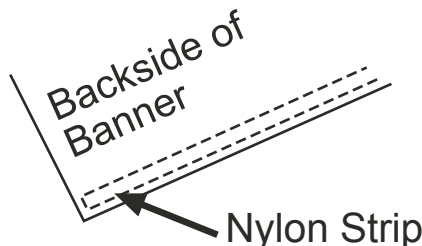


Insert the mounted graphic through the middle of the rail, allowing the graphic to run the width of the unit through the slit in the rail.

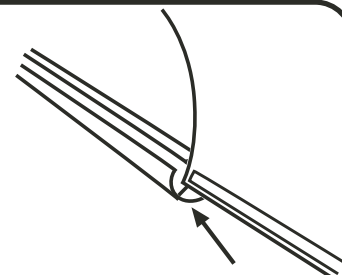


2

ASSEMBLE SUPPORT STAND

Insert the long support pole into the foot support with hook.

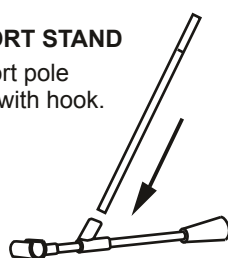

Next insert the short support pole into the ferrel of the long support pole for 78.5" height. Leave short pole out for 59" height.

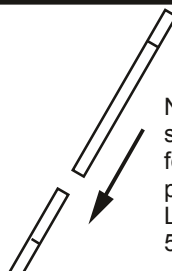



Next insert the long support pole with the hook into the ferrel of the short support pole.



3

ATTACH GRAPHIC TO STAND


When the graphic has been lead through both top and bottom rails, and you have assembled the rear support poles, then slide the top and bottom hooks over the rails and replace the end caps. This will then put the graphic under tension.

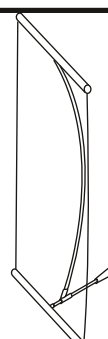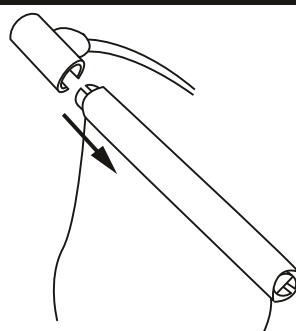

4

ATTACHING MULTIPLE STANDS

Remove rail end caps from the side which will connect with the other stand. Insert the rail connectors into the top and bottom of both rails and connect the two stands.

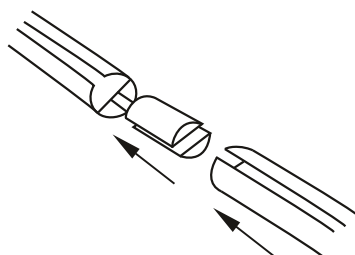

HANGING BANNERS

Attach hanging rail mounts to graphic rails and hang from holes on the hanging mounts.

