




PARTS LIST			
ITEM	PART #	DESCRIPTION	NOTES
1	3092	Front Load Soft Signage Frame	All Sides
2	3098	Soft Signage 2 Piece Grip Strip	Two(2) per sides
3	5890	2 Piece Corner Key	One(1) per frame corner

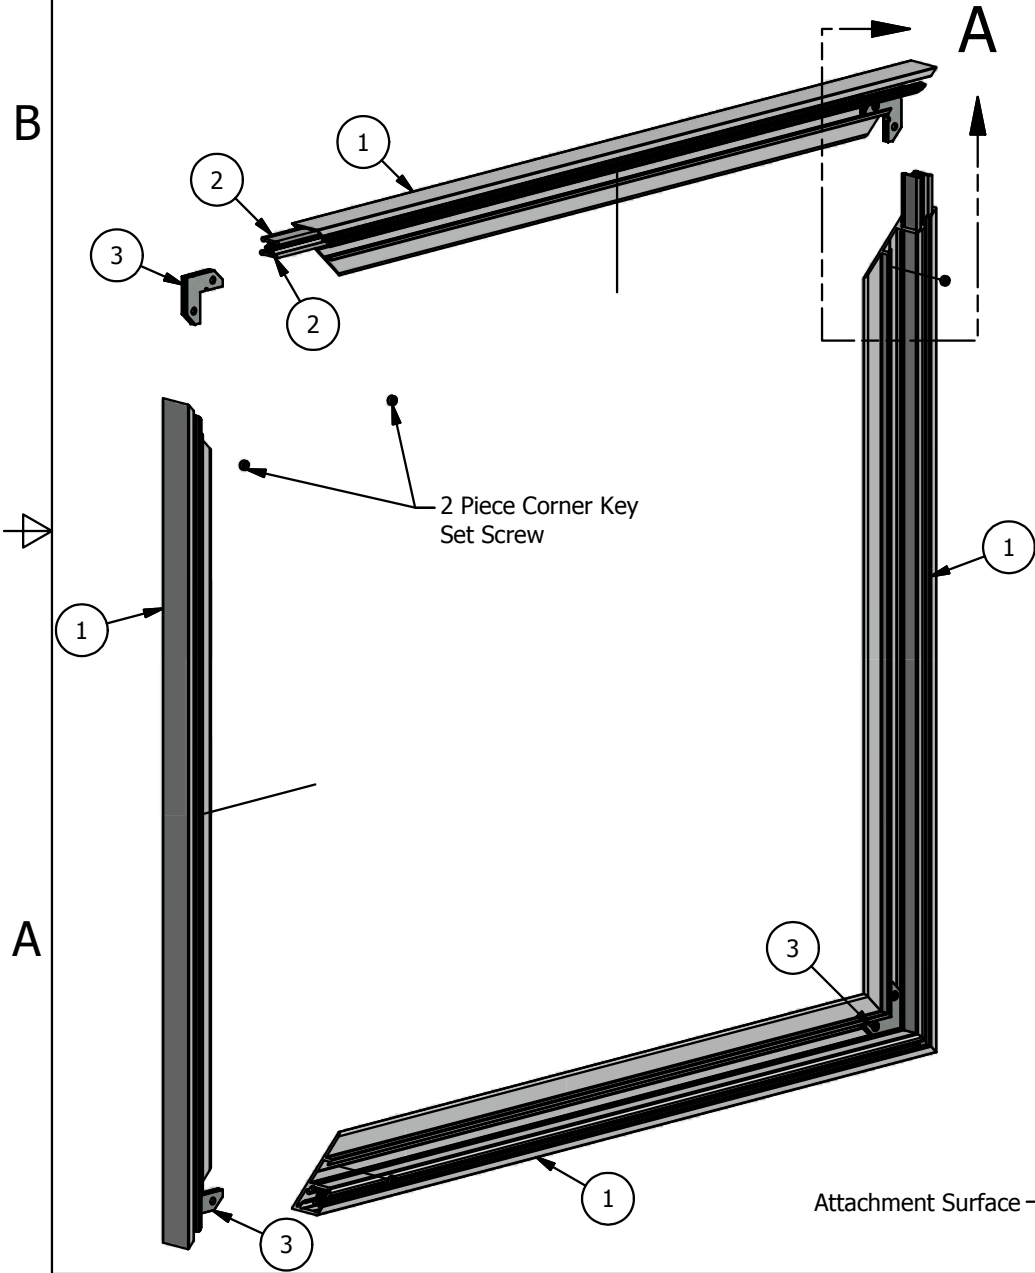

**NOTE: PRE-CUT KITS ARE NOT PRE-DRILLED.**  
 (Holes shown in this drawing are for reference only.  
 Drilling of pilot holes are to be done by fabricator.)

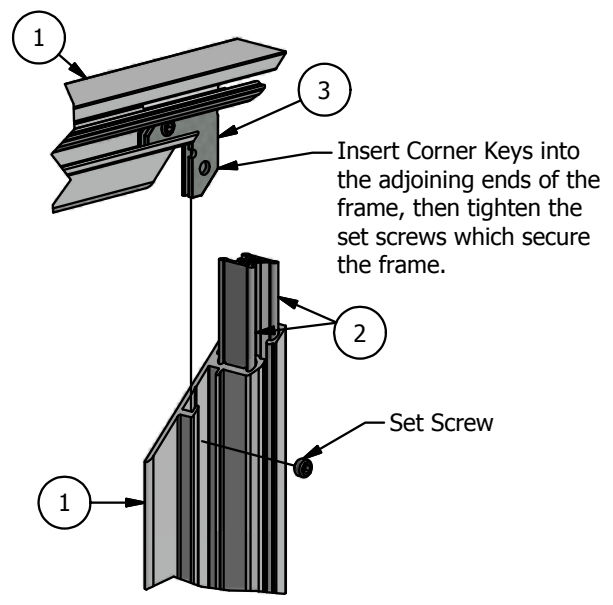

DETAIL A

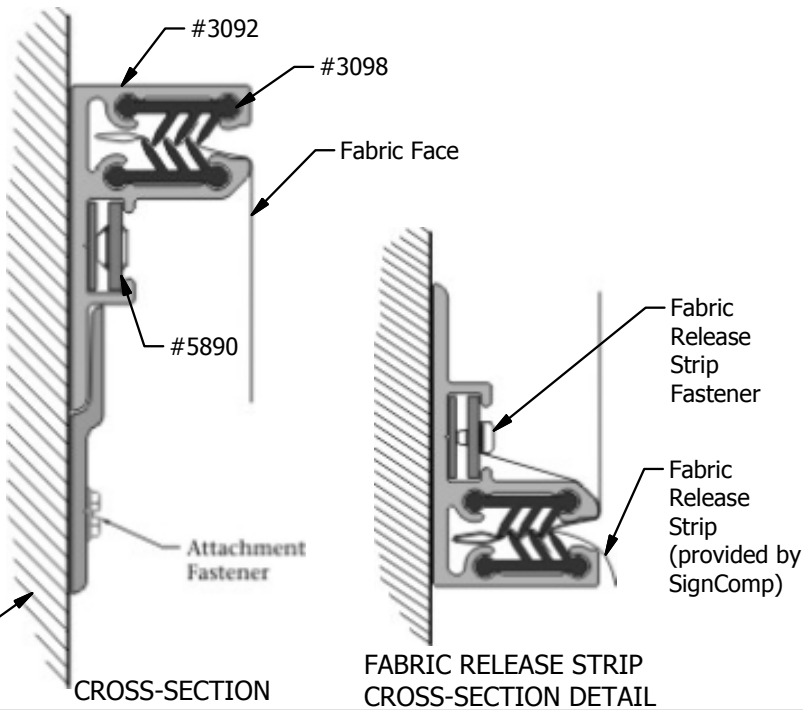

THIS DRAWING WAS CREATED AT NO CHARGE TO ASSIST YOU IN VISUALIZING OUR PROPOSAL. THE DRAWING HEREIN IS THE PROPERTY OF SIGNCOMP. PERMISSION TO COPY OR REVISE THIS DRAWING OR TO USE THIS DRAWING FOR PRODUCTION IS STRICTLY PROHIBITED AND CAN ONLY BE COPIED, REVISED OR USED FOR PRODUCTION WITH THE EXPRESSED WRITTEN PERMISSION OF SIGNCOMP.

Project Name: Front Load Soft Signage - Assembly		Sign Company: K3092	
Part #:		Revision:	
Date:	12/2/2016	Sheet:	1 of 1
Size:	A	Drawing By:	SBreihof

**SignComp**



## Front Load Soft Signage Pull-Tab Installation



Fig.1

### Items needed for assembly (Fig. 1)

- 1 - clear pull-tab (Included in kit)
- 1 - Printed pull-tab (Included in kit)
- 1 - Pan head Allen screw (Included in kit)
- 1 - 1/8" Allen wrench



Fig.2

### Step 1

Fold clear pull-tab in half (Fig.2)



Fig.3

### Step 2

Slide in printed pull-tab in between folded clear pull-tab (Fig.3) Align printed pull-tab inside clear pull-tab (Fig.4)

**NOTE: Do not use printed pull-tab by its self. Must be used with clear pull-tab.**

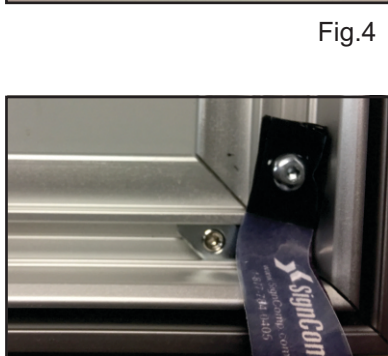


Fig.4

### Step 3

Remove one set screw from corner key. Slide Pan head Allen screw through the holes of the assembled pull-tab. Place Pan head Allen screw into corner key and tighten as shown. (Fig.5)

Fig.5